


1) LAYOUT DIAGRAM

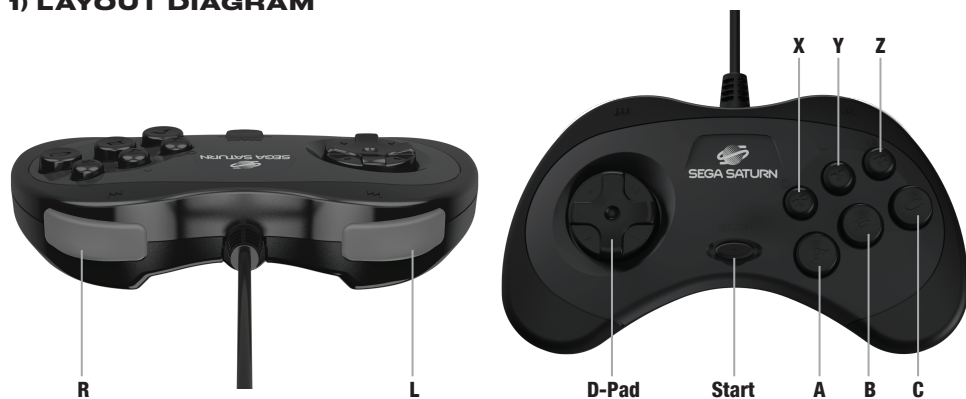

2) DEFAULT BUTTON MAPPING

Saturn	D-Input	X-Input	PS3®	Mac®	Switch
Up ↑	Y-Axis ↑	Y-Axis ↑	Y-Axis ↑	Y-	Y-Axis ↑
Right →	X-Axis →	X-Axis →	X-Axis →	X+	X-Axis →
Down ↓	Y-Axis ↓	Y-Axis ↓	Y-Axis ↓	Y+	Y-Axis ↓
Left ←	X-Axis ←	X-Axis ←	X-Axis ←	X-	X-Axis ←
A	2	A	●	3	A
B	3	B	×	2	B
X	1	X	■	4	X
Y	4	Y	▲	1	Y
C	5	RB	R2	8	ZR
Z	6	LB	L2	7	ZL
L	7	LT	L1	5	L
R	8	RT	R1	6	R
Start	10	Start	Start	10	+
Start + A	Guide	Guide		13	Home
Start + X	Select	Select	Back	9	-

Switch Macros	
Hold for 5 seconds	Mode Enabled
↑ + Start	D-Pad input
← + Start	Left Joystick
→ + Start	Right Joystick
↓ + Start	Swap A-B & X-Y

retro-bit®

SEGA®



SEGA SATURN

8 Button Arcade Pad with USB®

INSTRUCTION MANUAL
MANUAL DE INSTRUCCIONES
GUIDE D'UTILISATION

EU



Retro-bit and Super Retro are registered trademarks of Kool Brands, LLC. PS3 is a registered trademark of Sony Interactive Entertainment Inc. Mac is a registered trademark of Apple Inc. Steam is a registered trademark of Valve Corporation. Nintendo Switch is a registered trademark of Nintendo of America Inc. USB is a registered trademark of Universal Serial Bus Implementers Forum, Inc. All other mentioned trademarks are either trademarks or registered trademarks of their respective owners. SEGA, the SEGA logo, and Sega Saturn are registered trademarks of SEGA Holdings Co., Ltd or its affiliates. All rights reserved. This product is not endorsed, manufactured, produced, sponsored or licensed by Sony Interactive Entertainment Inc., Apple Inc., Valve Corporation, Nintendo of America, or Universal Serial Bus Implementers Forum. This product is licensed by Sega of America, Inc. © 2012 Kool Brands, LLC.

EN INSTRUCTION MANUAL

- Swap between D-Input and X-Input by holding the **Start + B** buttons for 5 seconds
- Compatible with PC, Mac®, Steam®, PS3®, Super Retro-cade, and Switch
- On Steam®, switching to X-Input may solve D-Pad issues (may differ between titles)

DE BEDIENUNGSANLEITUNG

- Bei USB®, wechsle zwischen dem Steuerkreuz und der X-Eingabe, indem du die Tasten **Start + B** 5 Sekunden lang gedrückt hältst.
- Mit PC, Mac®, Steam®, PS3®, Super Retro-Cade und Switch kompatibel
- Auf Steam® kann der Wechsel zur X-Eingabe Probleme mit dem Steuerkreuz beheben.

FR GUIDE D'UTILISATION

- Pour USB®, alterner entre configuration D et X en maintenant les touches **Start + B** pendant 5 secondes.
- Compatible avec PC, Mac®, Steam®, PS3®, Super Retro-cade, et Switch
- Sur Steam®, changer en configuration X pourrait résoudre les problèmes de croix directionnelle.

ES MANUAL DE INSTRUCCIONES

- Para USB®, intercambia la entrada D y la entrada X manteniendo pulsados los botones **Start + B** durante 5 segundos.
- Compatible con PC, Mac®, Steam®, PS3®, Super Retro-cade y Switch
- En Steam®, cambiar la entrada X puede resolver los problemas con la cruceta.

IT MANUALE DI ISTRUZIONI

- Per USB®, passa dalla configurazione D alla configurazione X tenendo premuto **Start + B** per 5 secondi.
- Compatibile con PC, Mac®, Steam®, PS3®, Super Retro-cade, e Switch
- Su Steam®, passando alla configurazione X si potrebbero risolvere i problemi della croce differenziale.



For more information, please visit
www.retro-bit.com