


1) LAYOUT DIAGRAM

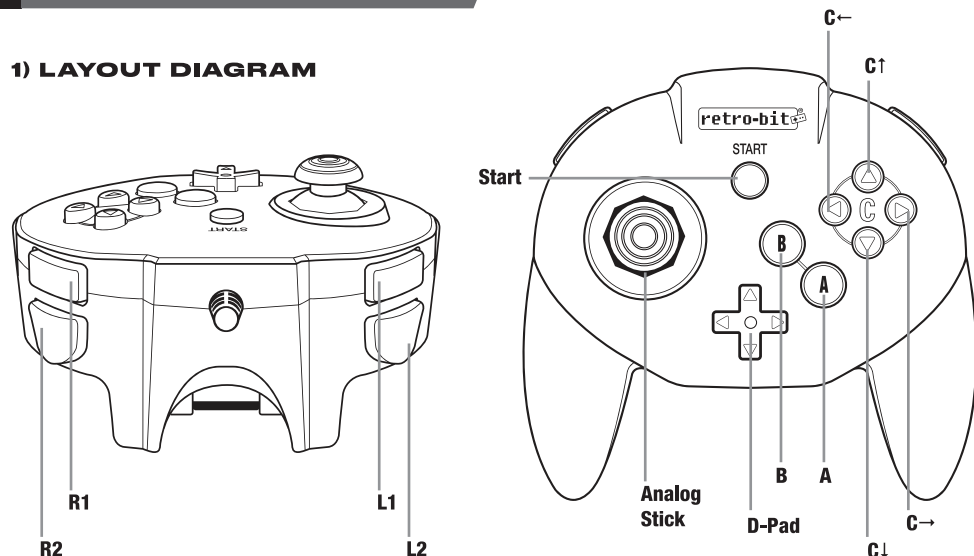

2) DEFAULT BUTTON MAPPING

Tribute64	D-Input	X-Input	PS3®	Mac®	Nintendo Switch®
Up ↑	Up ↑	Up ↑	Up ↑	Y-	Up ↑
Right →	Right →	Right →	Right →	X+	Right →
Down ↓	Down ↓	Down ↓	Down ↓	Y+	Down ↓
Left ←	Left ←	Left ←	Left ←	X-	Left ←
Joystick	Joystick	Joystick	Joystick	Joystick	Joystick
A	2	A (1)	●	3	A
B	3	B (2)	✕	2	B
C ↓	1	X (3)	▲	4	X
C ←	4	Y (4)	■	1	Y
C ↑	9	Select (7)	Share/Select	9	-
C →	10	Start (8)	Options/Start	10	+
L1	5	LB	L1	5	L
R1	6	RB	R1	6	R
L2	7	LT	L2	7	ZL
R2	8	RT	R2	8	ZR
Start	13	NC	-	13	Home

- Swap between D-Input and X-Input by holding the C ↑ + C → buttons for 5 seconds
- Compatible with PC, Mac®, Steam®, PS3®, and Nintendo Switch®
- On Steam®, switching to X-Input may solve D-Pad issues (may differ between titles)

retro-bit®

TRIBUTE 64

USB®

INSTRUCTION MANUAL

MANUAL DE INSTRUCCIONES

GUIDE D'UTILISATION



The Tribute64 is part of Retro-Bit®'s Platinum Series of controllers dedicated to classic retro gaming consoles. Designed for exclusive use on N64®, it features ultimate versatility for any genre of games. With a fully-responsive analog stick, an innovative and ergonomic design to boost your gaming experience, and the classic "A" and "B" buttons positioned just right, players will enjoy long hours of classic retro gameplay.

- Für USB, wechseln zwischen D-Eingang und X-Eingang indem die Tasten C ↑ + C → für 5 Sekunden lang gedrückt gehalten werden müssen
- Kompatibel mit PC, Mac®, Steam®, PS3® und Nintendo Switch®
- Steam®: Durch das Umschalten auf X-Eingang können Steuerkreuz Probleme gelöst werden (kann zwischen den Titeln abweichen)

- Pour USB, basculer entre la configuration D et la configuration X en maintenant les touches C ↑ + C → pendant 5 secondes
- Compatible avec PC, Mac®, Steam®, PS3® et Nintendo Switch®
- Steam®: Basculer la configuration en X pourrait résoudre les problèmes de touches directionnelles (peut être différent selon le jeu)

Retro-Bit is a registered trademark of Kool Brands, LLC. PS3 is a trademark registered trademark of Sony Computer Entertainment Inc. Mac is a trademark registered trademark of Apple Inc. Steam is a trademark registered trademark of Valve Corporation. Nintendo Switch is a trademark registered trademark of Nintendo of America Inc. All other mentioned trademarks are either trademarks or registered trademarks of their respective owners. This product is not endorsed, manufactured, produced, sponsored or licensed by Sony Computer Entertainment Inc., Apple Inc., Valve Corporation, or Nintendo of America Inc. ©2012 Kool Brands, LLC.

- Para USB, cambie entre D-Input y X-Input presionando los botones C ↑ + C → por 5 segundos
- Compatible con PC, Mac®, Steam®, PS3® y Nintendo Switch®
- Steam®: Cambiando a X-Input puede resolver problemas con el D-Pad (puede diferir entre títulos)

- Per USB, passa dalla configurazione D alla configurazione X tenendo premuto C ↑ + C → destro per 5 secondi
- Compatibile con PC, Mac®, Steam®, PS3® e Nintendo Switch®
- Steam®: Passando alla configurazione X si potrebbero risolvere i problemi della croce direzionale (potrebbe differire tra i giochi)



For more information, please visit www.retro-bit.com