

USER MANUAL

Macros

Set the DPad to default: Hold Start + Up for 5 seconds Set the DPad as Analog: Hold Start + Left for 5 seconds Set the DPad as C-Stick: Hold Start + Right for 5 seconds

Turbo

To set a button for rapid fire, hold the button and press the T Button. To clear rapid fire from a button, hold the button and press the C Button. You cannot set Select, Start, or the DPad to have rapid fire.